

# Weld Bench Fume Collector

## Models WB-2000 and WB-3000

First bench designed specifically for welding operations.




**WB-3000**

- Eliminates moving extraction arms over the welding zone.
- Increases workers' productivity and provides effective fume capture regardless of the workpiece position or size.
- Hinged side-wing panels accommodate longer workpieces.
- Ergonomically designed for operator comfort.
- Meets ACGIH guidelines for capturing weld fume—150 fpm minimum capture velocity through the breathing zone.
- Helps support OSHA Clean Air Standards.
- Combines a rugged 7-gauge work surface with the high efficiency Ultra-Web® FR filter cartridge.
- Ultra-Web FR cartridges, featuring nanofiber technology, provide higher filtration efficiency and longer filter life.
- Filtration efficiency is exceptional at 99.999% on 0.5 µm dust particles.\*
- Easy filter maintenance from clean air side makes filter changeout quick and efficient.
- Quiet operation.

# Weld Bench

## Dimensions & Specifications

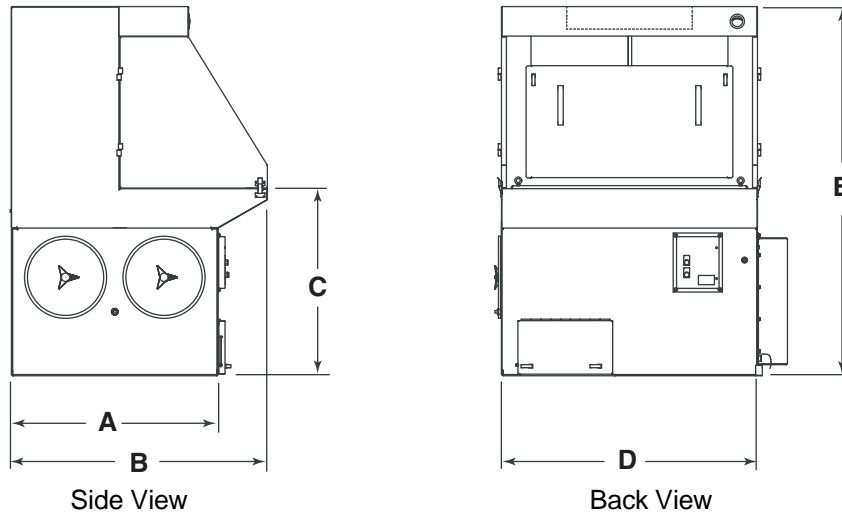

Model	Nominal Airflow** (cfm)	Motor (hp)	Backdraft (fpm)	Dimensions (inches)					Dust Capacity (ft <sup>3</sup> )	Max Load per sq. ft. (lbs)	Shipping Weight (lbs)	Sound Level dB(A)†
				A	B	C	D	E				
WB-2000	2000	3	150	42.0	52.0	38.0	52.0	75.0	1.4	150	1214	68
WB-3000	3000	5	150	42.0	52.0	38.0	78.0	75.0	2.8	150	1575	72

Note: Customer must have 90 to 100 psi clean air available.

### Standard Features

- Heavy-duty work surface supports 150 lbs/ft<sup>2</sup>
- Automatic self-cleaning pulse jet system
- 150 fpm backdraft velocity
- Stable, efficient airfoil fan
- Large capacity dust drawers
- Ultra-Web® FR cartridge
- Pneumatic tool connection
- Sprinkler head
- 10-year warranty

### Equipment Options

- Prewired controls with after-shift cleaning system
- IEC disconnect

\* Fractional efficiency is the ratio of the number of particles captured by the filters compared to the number entering the dust collector. The fractional efficiency of Ultra-Web® cartridges has been documented by an independent lab under the following conditions: Downflo® collector running at a 2:1 air-to-media ratio and pulsed continuously; dust injected at one grain per cfm; efficiency measured optically after 350 hours. Actual efficiency of the cartridge may vary depending on the application. Dust concentration, particle size, airflow, and pulse-cleaning methods all affect filtration efficiency.

\*\* Based on clean filters.

† Sound level per ANSI S12.34.1988. The actual measured sound level will vary, depending on background noise and room conditions.

**INDUSTRIAL AIR SOLUTIONS, INC.**

**Toll Free (USA) 1-877-844-3293**

P.O. Box 90246 • Raleigh, NC 27675  
 Raleigh 919-844-3293 • Fax 919-518-1667  
 www.industrialairsolutions.com  
 Email [info@industrialairsolutions.com](mailto:info@industrialairsolutions.com)

Information in this document is subject to change without notice.